


MEASURING FOR OUTSIDE MOUNT BLINDS & SHADES

Measure every window, even if they appear identical. Use a metal tape measure to ensure accuracy. Round down to the nearest $\frac{1}{8}$ ". Write all measurements on the measurement worksheets provided.

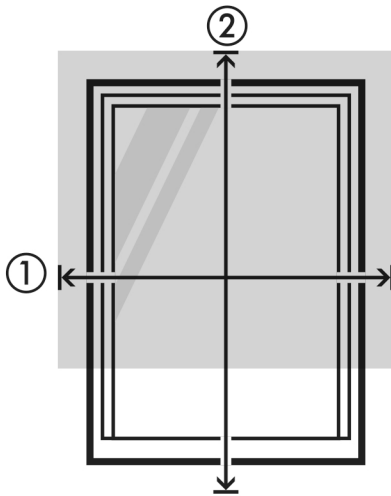

1. MEASURE FROM LEFT TO RIGHT

Measure the outside width (1) of the area you wish to cover. We recommend adding overlap to ensure material will cover your opening completely. See chart for recommended overlap.


This will be your ordering width.

2. MEASURE FROM TOP TO BOTTOM

Measure the height (2) of the area you wish to cover.

This is your ordering height.

3. WRITE these measurements on the measure sheet at the end of this guide.

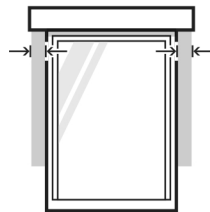

RECOMMENDED OVERLAP

PRODUCT	OVERLAP WIDTH	OVERLAP HEIGHT
Horizontal Blinds & Shades	3" (1½" each side)	2" top, 1½" bottom
Roller Shades	3" (1½" each side)	2" top, 1½" bottom
Horizontal Sheer Shades	6" (3" each side)	3" top, 1½" bottom

Roller Shades, Solar Shades and Sheer Shades will be made to the exact size you specify, measured end cap to end cap. To allow for operating clearance, fabrics will be approximately 1" narrower than the ordered width. Adjust overlap to ensure your opening is completely covered.

CONSIDERATIONS

CLEARANCE DEPTH

When mounting over another window treatment, order clearance depth at least 1" greater than the depth of the existing treatment. Consider using either spacer blocks or extension brackets.

- **SPACER BLOCKS** - Adds $\frac{3}{8}$ ". For outside mount, beyond trim/moulding. By adding spacer blocks or extension brackets, the possibility of light leakage around the edges increases. Adding drapery panels will reduce this.
- **EXTENSION BRACKETS** - Will add additional clearance, varies by product. Go online or call for more information.

WINDOW SILL

If you have a protruding window sill, consider having your shade/blind end on top of it. Your blind or shade will look best if it's ordered no wider than the width of the sill. If you also have moulding or trim, you may have to mount the product on the trim.

2-ON-1 HEADRAIL

Combine two treatments on one headrail for maximum light control. They can be raised independently, yet convey a uniform, streamlined appearance. If you have a mullion, consider placing the split where the mullion is located.

MOULDING

If you choose to mount your product beyond thick moulding or trim, we recommend ordering no-charge spacer blocks or extension brackets. There may be light leakage around the edges, which can be reduced by adding drapes.

If you'd like to mount your product directly on your moulding or trim, you will need at least 1" of flat surface.

CORDED CONTROL

You have the option to place the control (lift/tilt) on the right or left side. Pick the side that is easiest to reach.

SHADE STACKING HEIGHT

When your blinds or shades are fully raised, the "stack" will be gathered at the top of your window, obscuring your view. You cannot avoid this obstruction. If you want to retain all of your view, use outside mount and order your treatment to stack above the window opening.

